

OPERATION OF VACUUM WASTE TANK

1. Ensure the oil is cold that you are removing from the deep fryer.
2. Push the Vacuum waste tank next to the deep fryer.
3. Lift the nozzle from its holder on the handle. Whilst holding the nozzle in the air, ensure the left switch is on FAST and right switch is ON. Once you hear the vacuum start you can now place the nozzle into the deep fryer to commence removing the oil.
4. Once the oil is removed from the deep fryer, hold the nozzle pointing up in the air so that it removes excess oil from the hose and return the nozzle to the holder to store.
5. You can now wipe down the deep fryer and refill with fresh oil.
6. To recharge after use, ensure the left switch is on the SLOW position and right switch is in the OFF position.
7. If the vacuum slows or stops whilst using but it is still on, this indicates the tank is full. Please change to a new tank or call us on 1300 236 236 to get it swapped over.

